



## 2002 Audi TT Coupe

### Quick Reference Guide

#### Dear Audi Driver,

We are happy to welcome you into the family of Audi drivers.

This Quick Reference Guide will give you a quick and clear overview of the operation and function of your vehicle. You'll also find descriptions of some additional features. Keep in mind that not all vehicle features are described in this Quick Reference Guide.

**This Quick Reference Guide is not a substitute for the Owner's Manual. The Owner's Manual contains detailed information about all your vehicle's features plus important warnings and information about passenger safety. Please read it carefully.**

We wish you safe, reliable and enjoyable driving!

**Always check the Owner's Manual for additional important details and safety information.**

Note: \* Denotes features optional or unavailable on some models.



#### LOCKING SYSTEM

The power locking system locks and unlocks the doors. You can operate the system using the remote control or your keys.

##### Folding master key with remote control

Press the appropriate button for about 1 second.

##### 1 Unlock button

To unlock the driver's door **only**, press the button **once**. To unlock both doors press the button **twice**.

*Note:* If you do not open a door or the rear lid within 60 sec., the vehicle automatically relocks.

##### 2 Rear lid button


To unlock the rear lid, press the button for at least one second. Then open lid.

##### 3 Lock button

To lock the vehicle, press the button. If the doors and rear lid are correctly closed, all four turn signals will blink once.

##### 4 Unfolding the master key

Press the release button. To close the key again: press

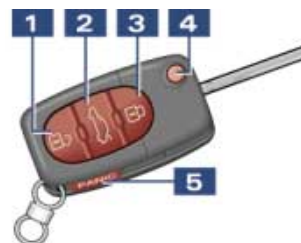

the button and fold the key bit back in.

##### 5 PANIC button

To activate the PANIC function (horn sounds and the vehicle lights blink), press the button. To cancel, press again.

*Note:* All windows will open if you insert the key in one of the doors and hold it in the position used to unlock the door. To close all the windows, hold the key in the position used to lock the doors.

**⚠ WARNING:** Do not leave children inside the vehicle unsupervised. If the locking knobs of all doors are depressed, the vehicle will be locked. In an emergency, it would be impossible to open the doors from the outside without the key. Passengers locked in the vehicle could not escape in an emergency.

#### SEATS

##### Adjusting front seats

##### 1 Head restraint

To pull up, grasp firmly with both hands and adjust. To push down, press the release button and adjust. The tops of each headrest should be at the seat occupant's eye level or higher.

##### 2 Seatback release

Pull up on the release and fold the seatback forward.

##### 3 Seatback angle adjustment

Take your weight off the backrest and turn the wheel.

##### 4 Seat height adjustment

Lift your body weight off the seat cushion, pull up on the lever, and adjust the seat height by shifting your body weight up or down.

##### 5 Back and forth adjustment

Pull lever up and hold, slide seat to desired position, release lever, shift weight to lock.



**⚠ WARNING:** Front seat passengers must never ride in a moving vehicle with the seatback reclined. The risk of personal injury increases with increasing rearward angle of the seatback. Safety belts only offer protection when the seatback is upright and belts are properly positioned on the body. Adjust your seats only when the vehicle is at a complete standstill.



## Rear seatbench

*Note:* Each part of the rear seat backrest can be folded down separately.

### Folding the rear seat backrest forward

Pull the release lever in the direction of the arrow and fold the backrest forward.

### Folding the rear seat backrest upright

Fold the backrest to its upright position until it securely latches into place.



## PASSENGER SAFETY

All vehicle occupants, including those in the rear, must buckle up for safety - even if it's just a short trip. For the best possible protection by the seat belts and airbags: there must be at least 10 inches (25 cm) between you and the steering wheel or dashboard. Do not position the seats too close to the steering wheel or the dash board. Keep the seats in an upright position and make sure that the belts are adjusted properly to your height. The shoulder belt must be positioned over the center of the occupant's shoulder. The lap portion of the belt must be positioned as low as possible across the pelvis. The belts should always fit snugly (see illustration). Keep your feet on the floor at all times. **For safety reasons, persons taller than 4'11" (1.5 m) may not sit on the rear seat.** Please read your Owner's Manual thoroughly and heed all warnings.



**⚠ WARNING:** The distance from the center of your breastbone to the center of the airbag cover on the steering wheel or instrument panel must be at least 10 inches (25 cm) or more.

**⚠ WARNING:** Thoroughly review your Owner's Manual for warnings and other important information about proper restraint use and what you can do to reduce the risk of injury in accidents. Failure to properly use restraint systems can cause serious personal injury.

**⚠ WARNING:** Always fasten safety belts before driving off. Always make sure passengers are properly restrained. Children 12 years old and younger who are less than 4'11" (1.5 m) tall must ride in the rear seat and be properly restrained as described in the Owner's Manual. The airbag is supplemental and does not replace safety belt use.

**⚠ WARNING:** Never install rear facing child seats or infant carriers on the front passenger seat. A child will be seriously injured or killed when the passenger airbag inflates.

## INSTRUMENT CLUSTER



### 1 Tachometer

### 2 Indicator/warning lights

EPC Electronic Power Control<sup>1)</sup>

Side marker lights/Headlights

Electronic Stabilization Program (ESP)

Electronic immobilizer

Turn signals, emergency flasher

High beam

Malfunction indicator lamp<sup>1)</sup>

AIR BAG AIRBAG system malfunction<sup>1)</sup>

ABS / ABS ABS or EDL \* system malfunction<sup>1)</sup>

BRAKE / BRAKE Parking brake or Brake system malfunction

Generator<sup>1)</sup>

Fasten seat belts

### 3 Engine coolant temperature gauge

### 4 Fuel gauge

### 5 Speedometer

### 6 Odometer

Upper odometer - distance driven on a single trip.

Lower odometer - total distance driven.

### 7 Trip odometer reset button

### 8 Display:

#### • Warning lights and Auto-Check System

OK No malfunctions detected

Engine coolant temperature too high/ Engine coolant level too low

Engine oil pressure too low

BRAKE / LIGHT Brake light defective<sup>1)</sup>

Headlights/ Tail lights defective<sup>1)</sup>

Brake pads worn<sup>1)</sup>

Low washer fluid level

Low fuel level

Check engine oil level

Battery voltage too high or too low<sup>1)</sup>

Automatic headlight adjustment control faulty<sup>1)</sup>

Speed warning 1 and 2

Rear lid/ door open

If one of the indicator/ warning lights shown in red comes on while you are driving: Stop the vehicle, turn off the engine and consult the Owner's Manual.

<sup>1)</sup> If one of these warning symbols comes on while

you are driving, contact an authorized Audi dealer as soon as possible.

#### • Trip computer

MPG Actual fuel consumption

Mi (km) Miles or kilometers to empty

h Driving time

Ø MPG Average fuel consumption (Ø l/100 km)

Ø MPH Average speed (Ø km/h)

#### • Outside air temperature

#### • Radio frequency

#### • Service Interval Display

The service interval display will appear briefly if your vehicle needs to be serviced. For example:

SERVICE IN 1200 MI (2000 KM)

### 9 Control knobs

#### for setting:

#### • Clock time/ Date display

Pull on the button as many times as needed until the

desired display appears. Then adjust by turning the knob.

#### • Scrolling through the Auto-Check System Displays

Press the button while the ignition is on and the vehicle is standing still.

#### • Briefly display driver information

Press the button when a red symbol appears.

#### • Briefly illuminating the clock and odometer

Press the button when the ignition is off.

#### • Saving the speed warning

Briefly press the button when you reach the desired speed. To clear the speed warning, hold the button down for longer than 1 second.

### 10 Clock time/ Date display

## FILLING THE FUEL TANK



Label for:

1 Fuel type


2 Tire pressure

© 2001 AUDI of America, Inc

Audi is constantly improving their products. Modifications in shape, equipment and technology are possible. No legal commitment is therefore implied by the details, illustrations and descriptions in this Quick Reference Guide. Reprinting, reproduction or translation, in whole or in part, are not permitted without written permission of Audi of America, Inc. All rights are expressly reserved by Audi of America, Inc. Subject to modification without notice. Printed in America. Concept and design: Priemer Kataloge GmbH.

Kurzanleitung Audi TT Coupé NA/ englisch 7.01

221.562.631.21

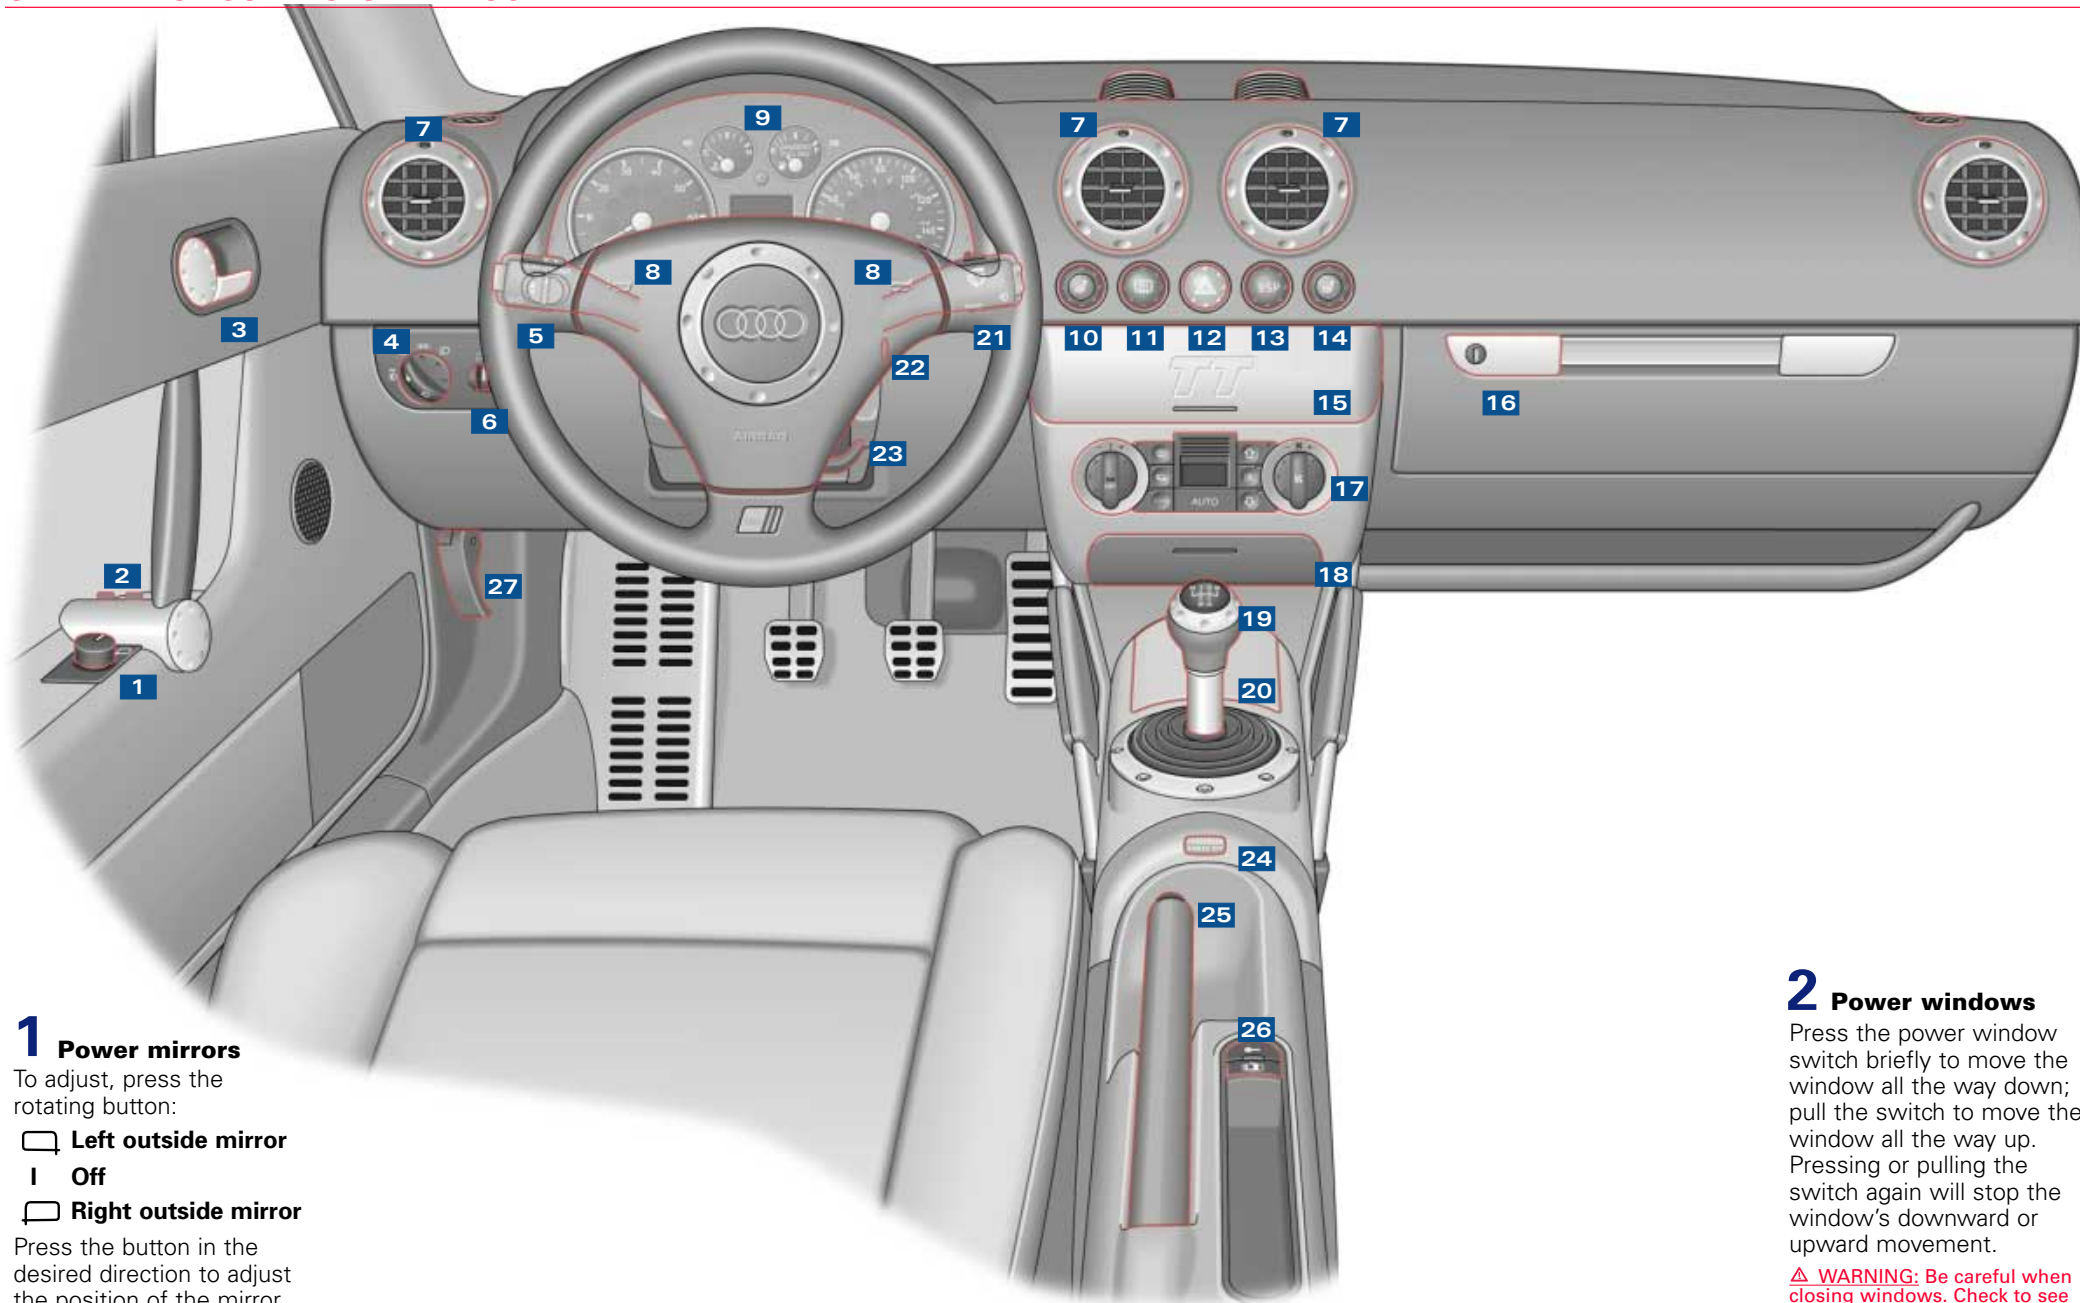

## 1 Power mirrors

To adjust, press the rotating button:

 **Left outside mirror**

 **Off**

 **Right outside mirror**

Press the button in the desired direction to adjust the position of the mirror. Mirror surfaces are heated when the ignition is on.

## 2 Power windows

Press the power window switch briefly to move the window all the way down; pull the switch to move the window all the way up. Pressing or pulling the switch again will stop the window's downward or upward movement.

**⚠ WARNING:** Be careful when closing windows. Check to see that no one is in the way, or serious personal injury could result.



### 3 Door handle

### 4 Light switch

○ Off

Canada models: When the ignition is switched on, the foglights, side marker lights and tail lights come on (DRLs = Daytime Running Lights).

☰ All lights except headlights

☰ All lights including headlights

Turn the switch to the low beam position, then pull out to the  
- 1st stop:

☰ Front fog lights

*Note:* Should you forget to turn off the headlights when you get out of your car, a buzzer will sound to remind you that they're still on.

### 5 Turn signals and headlight dimmer switch



- 1 Right turn signal
- 2 Left turn signal
- 3 High beams
- 4 Headlight flasher

#### Cruise control

**To turn the cruise control on:** Slide switch **A** to ON. Press button **B** to save and maintain the current vehicle speed.

**To turn the cruise control off temporarily:** Depress the brake or clutch pedal, or slide switch **A** to OFF.  
**To restore the stored speed:** Slide switch **A** to RES.

**To turn the cruise control off completely:** Slide switch **A** to OFF.

**⚠ WARNING:** It is dangerous to use the Resume feature when the previously set speed is too fast for existing traffic conditions.

**⚠ WARNING:** To prevent unintended operation of cruise control, turn it off when it is not being used.

### 6 Instrument cluster illumination

### 7 Air vent

### 8 Horn

### 9 Instrument cluster

(see back cover)

### 10 Seat heating switch (driver's side)\*

Press the switch and turn the outer ring to adjust the heat output.

### 11 Rear window defogger switch

### 12 Emergency switch

### 13 Switch for ASR\* or EDL\*

### 14 Seat heating switch (passenger's side)\*

Press the switch and turn the outer ring to adjust the heat output.

### 15 Cover for radio

To open, tap the bottom of the cover.

### 16 Lockable storage compartment

### 17 Switches for air conditioning:

– ⏻+ ON/ OFF, Temperature control

To turn on or off:  
Press or pull the switch.

☂ Defog/ defrost

AUTO Automatic mode

– ⏻+ Fan speed

**Standard setting for year-round comfort:**  
Set the temperature control to 75 °F (23 °C) and switch on the Automatic mode.

### 18 Ashtray with cigarette lighter/ electrical outlet

### 19 Gearshift lever

*Note:* Shift into **R** (Reverse) only when the vehicle is at a complete standstill. To engage **R**, move lever to left, press down and push forward.

### 20 Switch cluster in the center console


Here you'll find the following switches:

☑ Fuel filler flap release

☑ Rear lid release

☑ Interior movement sensor turn off

### 21 Lever for wind-shield wiper and washer system

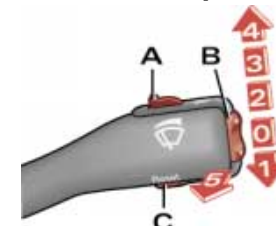

#### 0 Wiper OFF

#### 1 One-tap wiping

**2 Intermittent wiping**  
You can adjust the wiping intervals to different settings using the small lever **A**.

#### 3 Low wiper speed

#### 4 High wiper speed

#### 5 Automatic wiper/ washer

Pull and hold the lever.

#### Trip computer

You can scroll through the information on the display by tapping the upper half or lower side of the rocker switch **B**.

To reset specific stored values to zero, press and hold button **C** for a few seconds.

### 22 Ignition lock

*Note:* Your Audi is equipped with an „interlock feature.“ You must depress the clutch pedal all the way before you can start the engine.

**Always check the Owner's Manual for additional important details and safety information.**

*Note:* \* Denotes features optional or unavailable on some models.

### 23 Lever for adjustable steering column

Move the lever down and adjust the steering column to the correct position for you. Then push the lever up again until it is firmly held in the upper position.

**⚠ WARNING:** The column should only be adjusted when the vehicle is at a complete standstill.

**⚠ WARNING:** The distance from the center of your breastbone to the center of the airbag cover on the steering wheel must be at least 10 inches (25 cm) or more.

### 24 Passenger AIRBAG OFF

**⚠ WARNING:** Before driving: Always look at the „PASSENGER AIRBAG OFF“ warning light on the center console to be sure that the function of the airbag on the passenger's side has been set consistent with the instructions and warnings in your Owner's Manual. Failure to use the ON/ OFF switch correctly can increase the risk of serious injury or death in a collision.

### 25 Parking brake lever

### 26 Central locking switch

By pressing the appropriate symbol, the entire vehicle can be:

☑ locked

☑ unlocked

### 27 Engine hood release lever

See your Owner's Manual!